

TC·HELICON

VOICELIVE TOUCH PARAMETER REFERENCE CHART V1.0

MIX LEVELS

1. Voices
Off to +6dB
2. Delay/Reverb
Off to +6dB
3. Guitar
Off to +24dB
4. Guitar Effects
Off to 0dB
5. Aux In
Off to 0dB
6. USB In
Off to 0dB

SETUP MENU

1. Phantom Power
Off, On
2. Tone Style:
Off
 - 1 Normal
 - 2 Less Bright
 - 3 Normal + Warmth
 - 4 More Compression
 - 5 Normal No Gate
 - 6 Less Bright No Gate
 - 7 Warmth No Gate
 - 8 More Comp No Gate
3. Pitch Correct Amount
0-100%
4. Guitar FX Style:
Off
 - 1 Thicken + Hall
 - 2 Hall
 - 3 Thicken + Room
 - 4 Room
 - 5 Thicken + Arena
 - 6 Arena
 - 7 Thicken
5. Output
Stereo
Mono
6. USB
Stereo
Track
Insert
7. Tap Global
Off, On
8. Key & Scale Global
Off, On

9. NaturalPlay Global

- Off*
- Auto*
- Guitar*
- MIDI*
- Aux*
- Scale*
- Shift*
- Notes*
- Notes 4 Channel*

10. Pedal

- 1 Harm Favorite Loop
- 2 Loop Stop Undo
- 3 Loop Left Right (arrows)
- 4 Talk Bank Favorite
- 5 Harm Bank Favorite
- 6 Harm Preset 10s Preset 1s
- 7 Talk Preset 10s Preset 1s
- 8 Harm Stop Loop

11. MIDI Channel

- 1-16*

MIDI MENU

1. MIDI Channel
2. Filter
None
Program Change
System Exclusive
Prg Change + Sysex
3. CC Channel
4. Transpose
+/- 4 Octaves
5. Keyboard Split
Above
Below
6. Keyboard Split Note
C-1 to G9
7. Sysex ID #
0-126, Any
8. Vibrato Wheel Boost
Boost, Manual
9. Pitch Bend Range
0-12 Semitones
10. MIDI Control
Merge
MIDI
USB

ADVANCED MENU

1. Scroll Speed
10(fastest) to 50(slowest)
2. Lead Mute
Off, On
3. Lead Delay
None, Voices
4. Guitar Mute
Off, On
5. Loop Undo
Off, On
6. Loop Feedback
0-100%
7. Output Level
Off to 0dB
8. Tuning Reference
420 to 460 Hz
9. Demo Mode
Off, On

µMOD MENU

1. Level
Off to 0dB
2. Style
0 Micromod Clone
1 Micromod wider
2 Thicken
3 Light Chorus
4 Medium Chorus
5 Wide Chorus
6 Mono Chorus
7 Fast Rotor
8 Flanger
9 Flange Feedback
10 Flange Negative
11 Mono Flange
12 Soft Flange
13 Panner
14 Tube
15 Up Tube
16 Down Tube
17 Down & Up Tube
18 Rise & Fall
19 Ottawa Wide
20 Cylon Mono
21 Cylon Stereo
22 Alien Voiceover
23 Underwater
3. Lead Level
Off to 0dB

DELAY MENU

1. Level
Off to 0dB
2. Style
0 Quarter
1 Eight
2 Triplet
3 Dotted
4 Long Dot
5 Long Trip
6 Sixteenth
7 Ping Pong 1
8 Ping Pong 2
9 Ping Pong 3
10 Multi Tap 1
11 Multi Tap 2
12 Multi Tap 3
13 Multi Tap 4
14 Multi Tap 5
15 Multi Tap 6
16 Classic Slap
17 Single Slap
3. Lead Level
Off to 0dB
4. Width
0 to 100%

REVERB MENU

1. Level
Off to 0dB
2. Style
0 Smooth Plate
1 Soft Hall
2 Amsterdam Hall
3 Broadway Hall
4 Snappy Room
5 Library
6 Dark Room
7 Music Club
8 Studio Live Room
9 Stretched Room
10 Warehouse
11 Bouncy Room
12 Real Plate
13 Reflection Plate
14 Thin Plate
15 Bright Chamber
16 Bright Plate
17 Real Plate Short
18 Real Plate Long
19 Wooden Chamber
20 Jazz Plate

- 21 Quick Plate
- 22 St Joseph Church
- 23 Hockey Arena
- 24 Dome Chapel
- 25 Museum
- 26 Indoor Arena
- 27 Cozy Corner
- 28 Thin Spring
- 29 Full Spring

3. Lead Level
Off to 0dB

FX MENU

- 1. HardTune Style**
 - Off
 - 1 Hard Tune
 - 2 Female Gender
 - 3 Male Gender
 - 4 Octave Up
 - 5 Octave Down
 - 6 Female Octave Up
 - 7 Male Octave Down
 - 8 Male Octave Up
 - 9 Fem Octave Down
 - 10 Natural
 - 11 Natural Female Gender
 - 12 Natural male Gender
- 2. Transducer Style**
 - 1 Lowcut 1
 - 2 Lowcut 2
 - 3 Bandpass 1
 - 4 Bandpass 2
 - 5 Highcut
 - 6 Midcut
 - 7 Soft Drive
 - 8 Medium Drive
 - 9 Hard Drive
 - 10 Radio
 - 11 Radio Drive
 - 12 Peak Radio
 - 13 Boxey Radio
 - 14 Clear Megaphone
 - 15 Clip Megaphone
 - 16 Beat Box
- 3. Low Cut Frequency**
85 Hz to 20kHz
- 4. Transducer Level**
-20dB to +20dB
- 5. Transducer Routing**
 - Off
 - Lead
 - Harmony + Double
 - Voices
 - Lead FX
 - Harmony FX

DOUBLE MENU

- 1. Level**
Off to 0db
- 2. Style**
 - 0 Voice Tight
 - 1 Voice Loose
 - 2 Voices Wide
 - 3 Voices Tight
 - 4 Voices Wide
 - 5 Voices Mono
- 3. Lead Level**
Off to 0dB

HARMONY MENU

- 1. Level**
Off to 0dB
- 2. Style**
 - 0 1 Voice Above (High)
 - 1 1 Voice Below (Low)
 - 2 1 Above 1 Below (Low+High)
 - 3 2 Voices Above (High+Higher)
 - 4 2 Voices Below (Lower+Low)
 - 5 Far Above Far Below (Higher+Lower)
 - 6 2 Above 1 Below (Low+High+Higher)
 - 7 1 Above 2 Below (Lower+Low+High)
 - 8 2 Above Far Below (Lower+High+Higher)
 - 9 2 Above2 Below (Lower+Low+High+Higher)
 - 10 Gospel High (Low+High+Higher)
 - 11 Gospel Low (lower+Low+High)
 - 12 Upper Choir (High+Higher)
 - 13 Lower Choir (Low+Lower)
 - 14 Bass Boys (Low+Lower)
- 3. Double**
 - Off
 - On
 - Choir
 - Both
- 4. Lead Level**
Off to 0dB
- 5. NaturalPlay**
 - Auto
 - Guitar
 - MIDI
 - Aux
 - Scale
 - Shift
 - Notes
 - Notes 4 Channel
- 6. Key**
C to B
- 7. Scale**
 - M1 (Major 1), M2 (Major 2), M3 (Major 3)
 - m1 (Minor 1), m1 (Minor 2), m1 (Minor 3)

HARMONY VOICE MENUS

- 1. Level**
Off to 0dB
- 2. Pan**
Left, 99 to 0, Center, 0 to 99, Right
- 3. Gender**
-50(Male) to 50(Female)